

## User's easy Manual

### Pulse

Press "Pulse" for pulsating wash in Wash, Bidet & Power wash. Water pressure is rhythmically changed from strong to weak.

### Massage

Press "Massage" for oscillating wash in Wash, Bidet and Power Wash. Nozzle is moving back and forth repeatedly for massage effect.

### Massage control

Massage width can be adjusted by pressing "Child" in massage mode. There are 5 levels in massage width.

### Child

Child safety mode  
Nozzle moves forward and water pressure reduced.  
Power wash is not available in Child mode.  
Child mode will be released in 15 minutes automatically.

### Energy saving

Energy saving mode can be changed by pressing the button (repeatedly).

Mode	LED display
Automatic mode	○ ●
Learning energy saving	● ○
Cancel	○ ○

### Deodorizing fan speed

While press the STOP button, press ENERGY SAVING button.

Water Temp (LED)		Speed of Deodorizing Fan	
●	●	Seated	Unseated
OFF	OFF	ON	OFF
OFF	ON	ON	Low speed
ON	ON	ON	High speed

### Seat temp

Seat temperature can be adjusted by 4 levels.  
(Room temp / 93°F / 100°F / 107°F)  
(Room temp / 34°C / 38°C / 42°C)

### Power Control


Water pressure can be adjusted by pressing + / - when using Wash, Bidet and Power wash. Also, temperature of dryer can be adjusted by pressing + / -. There are 5 levels in each function.

### Position control

Nozzle position can be changed by pressing ▲ / ▼ in Wash, Bidet and Power wash.


### Water temp

Water pressure can be adjusted by 4 levels.  
(Room temp / 93°F / 96°F / 100°F)  
(Room temp / 34°C / 36°C / 38°C)

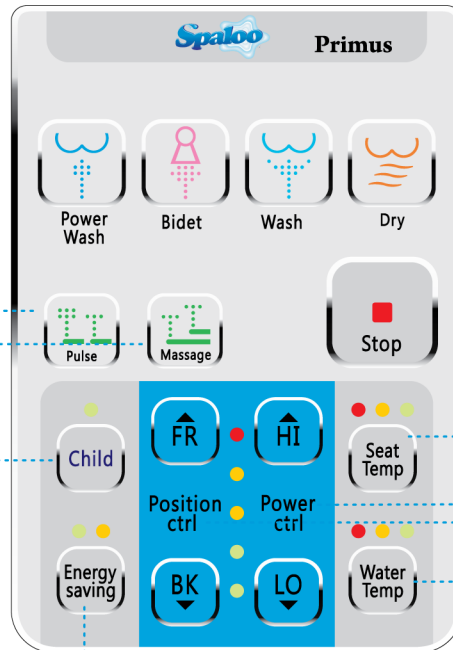

## How to use

※ Press the STOP button before sitting, current setting will be displayed.  
(Water pressure, Nozzle position, Seat temp, Child, Energy saving mode)

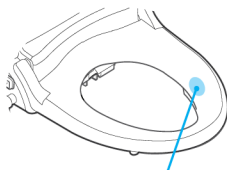

User sensor

Make sure to sit on the user sensor of seat

### Wash

Use for posterior wash.  
It runs for 2 minutes.

### Power wash

Use for Power wash.  
It runs for 2 minutes.

### Bidet

Use for feminine wash.  
It runs for 2 minutes.

### Dry

Use for drying your wet parts  
It runs for 3 minutes.

### Stop

Use to stop any operations.  
※ Unless stop button is pressed, Wash/Bidet/Power wash stops its operation in 2 minutes and dry for 3 minutes automatically.

### Cleaning of nozzle

1. Press the Wash button on the side control panel for 3 seconds while not seated, and then the nozzle will move forward and stop. (for 2 minutes)
2. Clean the nozzle with an unused toothbrush, etc., and press the Stop button, then it will return to the original place for self cleaning.

- ※ There are basic function buttons (Stop/Wash/Bidet) on the right side of main unit.
- If a remote control is out of order or batteries are run down, use side control buttons.
- ※ Press "STOP" on the side control panel to turn off the unit.