

sanctuary

walk-in bathtubs

Please note:

After the air jet system is used, an automatic purge cycle that lasts 1-3 minutes will start approximately 15-20 minutes after the air jet system is turned off. This will occur each time the air jet system is used.

This Air Jet Purge Cycle ensures that the system stays clean and bacteria free. Each air jet has a spring check valve to prevent water from getting into the jet, but should water get into the lines, this purge cycle will blow the water out.

DO NOT push the air jet button once this purge cycle has begun. Please let the cycle run through and it will automatically turn off at the end.

We hope you fully enjoy your new Sanctuary Walk-In Bathtub!